

## Notes before installation:

- Please read LED Aquaculture Lights use manual carefully before installation and follow the instructions.
- To avoid accidents like damage, dropping, electric shock, fire, please don't arbitrarily retrofit or change any lamp fittings.
- Clean lamps with a soft wrung-out soapy cloth, and then wipe it with a dry cloth. Please don't wipe the lamps with gasoline or other volatiles. Please don't spray insecticides on the lamps. Otherwise, it may cause discoloration or damage.
- Please do not open the lamp without permission.
- Please turn off the power when in installation or maintenance.


(ID: G9) FL100W-06 FL200W-06 FL300W-06 FL500W-06 FL600W-06




## 1. Technical Parameters

Model number	Power	Beam Angle	Effi.	Input Voltage	LED Type
FL100W-06-G9	100W	90°/120°	150Lm/W	AC 100-277V 50/60Hz	SMD 5050
FL200W-06-G9	200W	90°/120°			
FL300W-06-G9	300W	90°/120°			
FL500W-06-G9	500W	90°/120°			
FL600W-06-G9	600W	120°			

## 2. Installation Dimensions (Unit: mm)

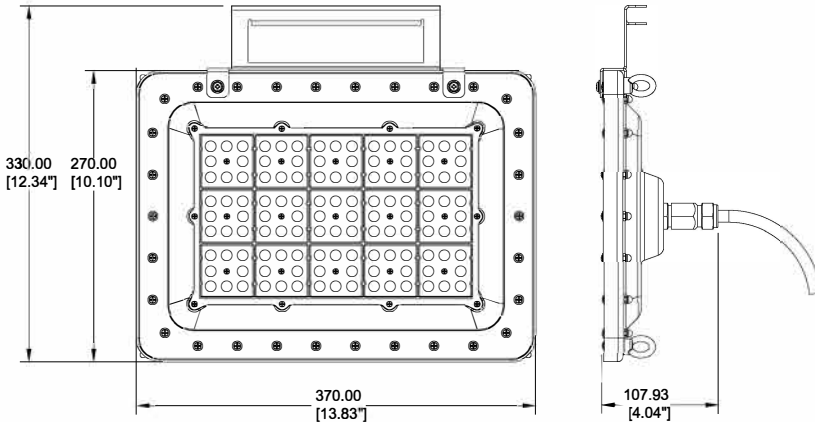

## 3. Installation Method

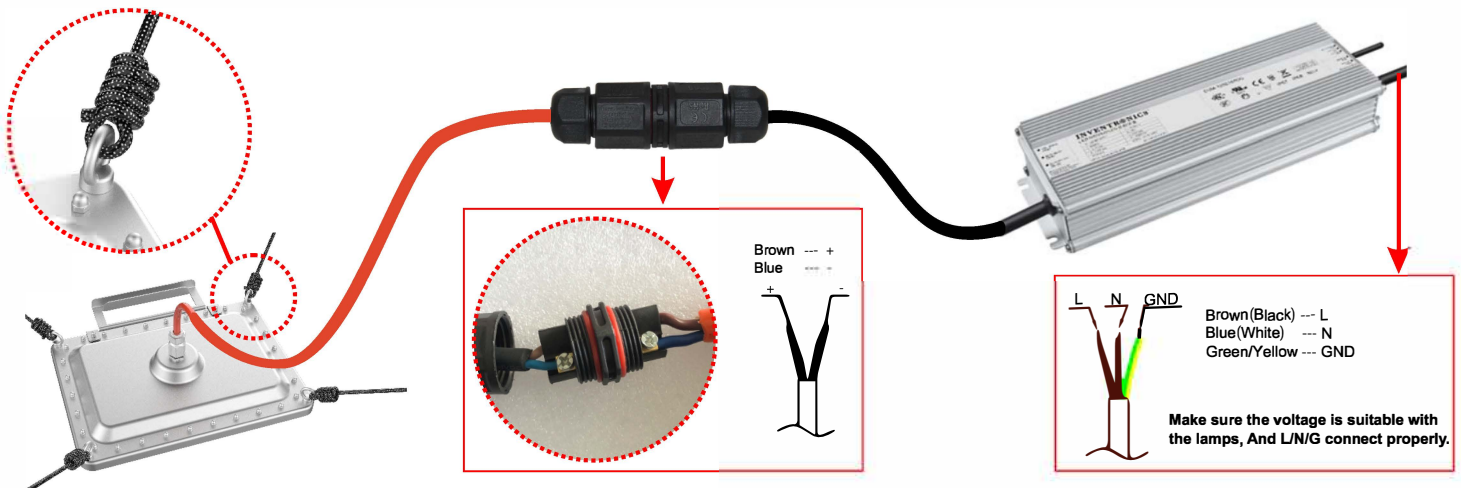

Fasten the 4 hanging rings of luminaire with ropes and Fix the lamp at the suitable position.

### Caution:

1. Aquaculture lights are only used for underwater 1-20 m ;
2. It is forbidden to be used outside the water area ( in the air ) and on the water surface.

## 4. Attention

1. Install by qualified electricians only.
2. Make sure that the supply voltage is disconnected before installation.
3. Make sure the voltage is suitable with the lamps, And L/N/G connect properly.
4. Don't open the lamps without Manufacturer's Authorization.